


ANTARION

185 D, rue Louise Labé
69970 CHAPONNAY

www.antes-diffusion.com

ANTARION






Rallonge de châssis pour:
Ford Transit 2014- Plateau
R=2300 kg | S=150 kg | D=12,50 kN

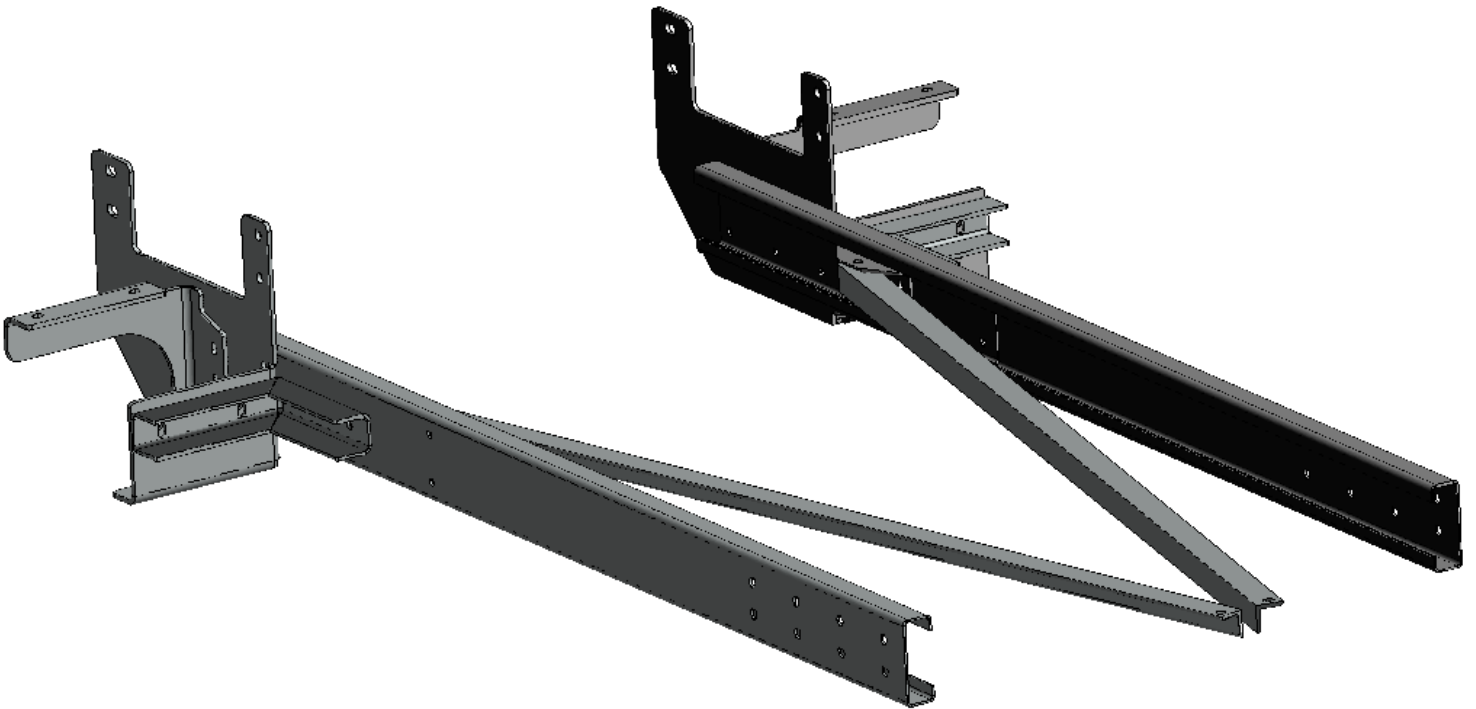


ANTARION

ANTARION
185 D, rue Louise Labé, 69970 CHAPONNAY
<https://www.antes-diffusion.com/>


Fitting

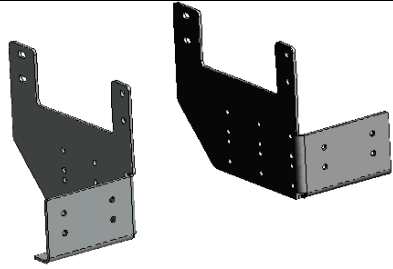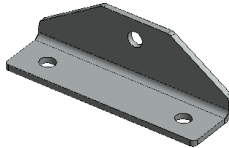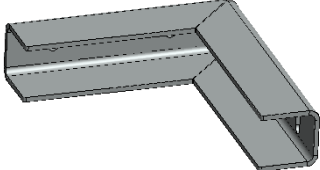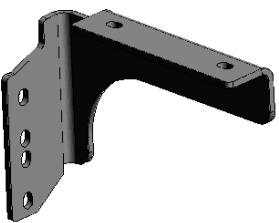	Frame adapter (L)	1x		Frame reinforcements (only 1600mm version)	2x
	Frame adapter (R)	1x			
	Frame extensions E	2x		M10x30 8.8 DIN933 M10x30 10.9 DIN933 M10x30 DIN931 M12x90 10.9 DIN931	18x 28x 4x 8x
	Reinforcements 600 mm (only 1200 and 1600mm version)	2x			
	Part A	2x		M10 DIN985 class 10 M12 DIN985 class 8 M12 DIN985 class 10	28x 18x 8x
	Part B (L)	1x		Ø 10,5 DIN125 Ø 13 DIN9021 Ø 10,5 DIN9021	38x 8x 12x
	Part B (R)	1x		Ø 16x2x58	8x
	Part C (L)	1x			
	Part C (R)	1x			


Torque settings for nuts and bolts

	M10 (10.9)	65,2 Nm
	M12 (10.9)	115 Nm

$L \leq 750 \text{ mm}$

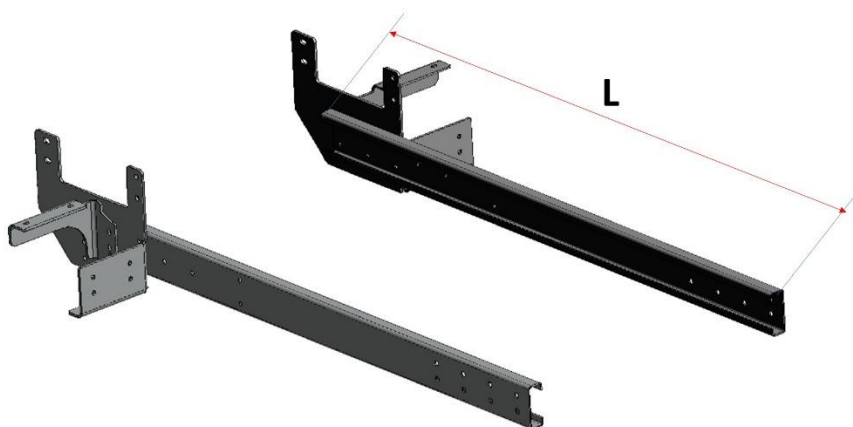

$L > 750 \text{ mm}$


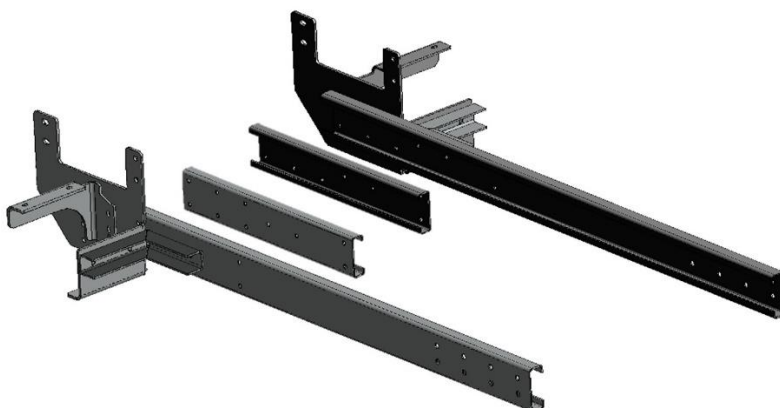


$L \geq 1200 \text{ mm}$



1

M10x30

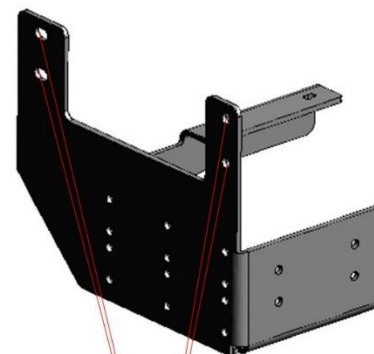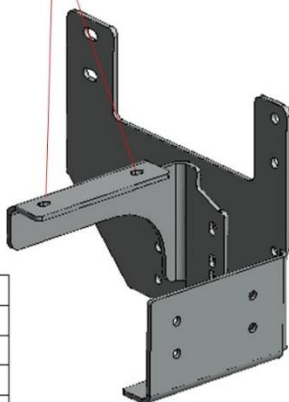


M12x90 + sleeves




Frame adapters	2x
Parts C	2x
Bolt M10x30 DIN931	4x
Nut M10	4x
Washer Ø 10,5 DIN9021	4x
Sleeve 16x2x58	8x
Bolt M12x90	8x
Nut M12 class 10	8x
Washer Ø 13	8x

2


Frame extension E	2x
Reinforcements (for $L \geq 750$ mm)	2x
Bolt M10x30 10.9	12x
Nut M10 class 10	12x
Washer Ø 10,5 DIN125	12x

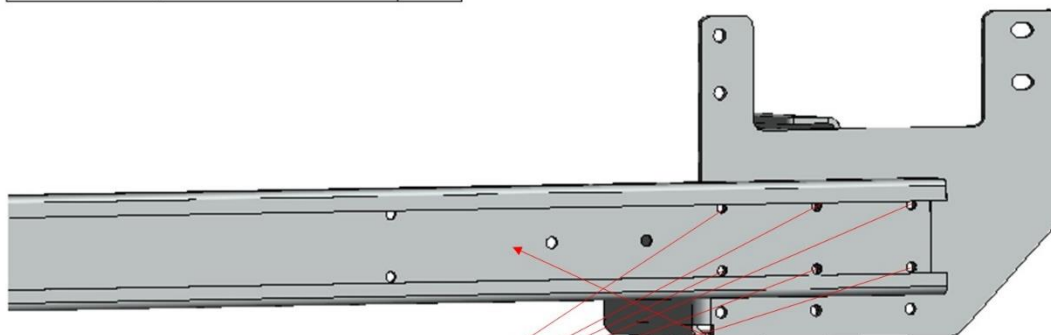

M10x30

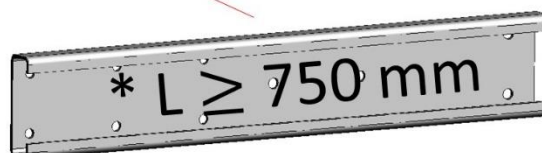


3

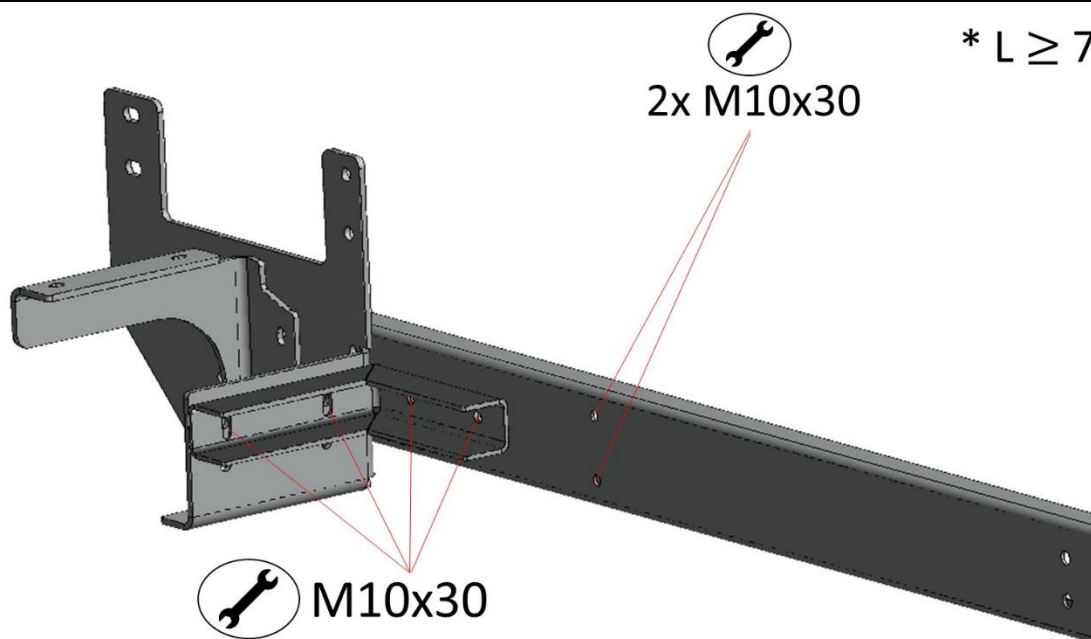

Parts B	2x
Bolt M10x30 8.8	8x (12x for $L \geq 750$ mm)
Nut M10 class 8	8x (12x for $L \geq 750$ mm)
Washer $\varnothing 10,5$ DIN9021	8x (12x for $L \geq 750$ mm)

4

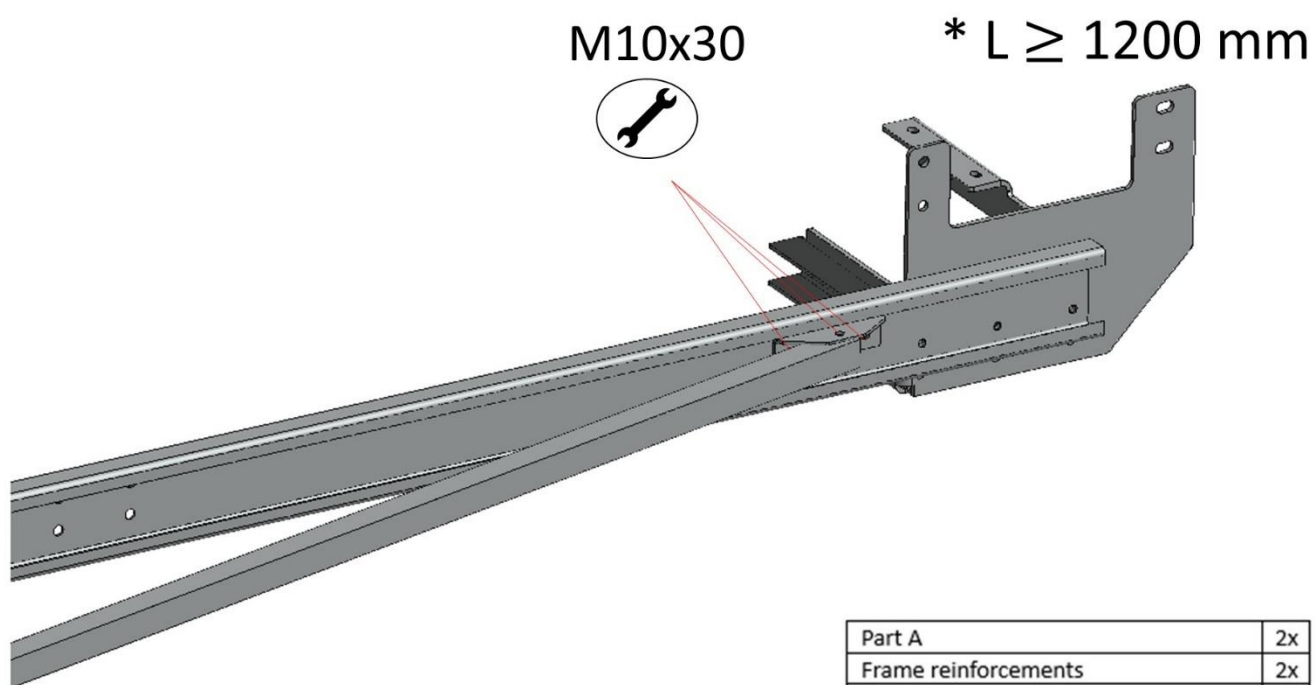

Part A	2x
Frame reinforcements	2x
Bolt M10x30	2x
Nut M10	2x
Washer M10	2x